

24" InWall™ Media (Items N2C1)




Monitor and accessories not included

Big presentation capabilities
in a compact package –
a true **Small Room Solution!**

Standard Features

- Extremely compact case presentation platform ideal for small rooms
- Articulating Media Arm and Bracket (monitor not included)
- Glove & Bib Storage Shelves
- Flip-up Writing Surface
- Additional built-in Storage (behind Writing Flip-up)

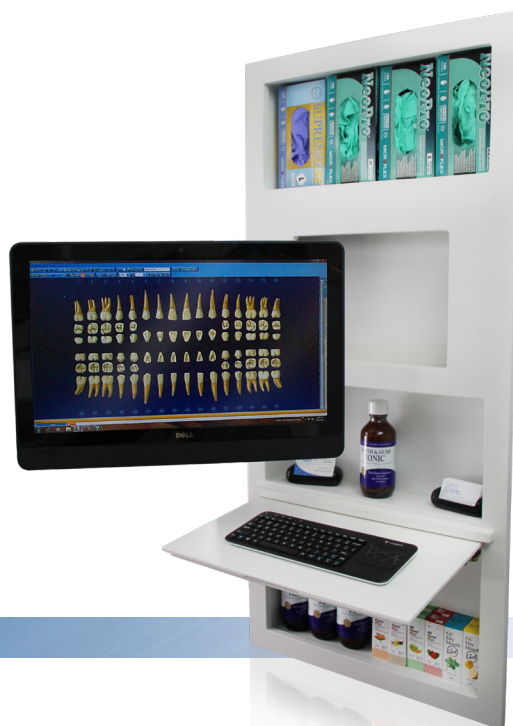

COLOR CHOICES




Cabinet Color Selections:

- Face Frame and interiors available in standard color choices.
- or - Upgrade to woodgrain finish interiors with matching Face Frame paint. (Standard EP woodgrain finishes)





Dimensions & Utilities

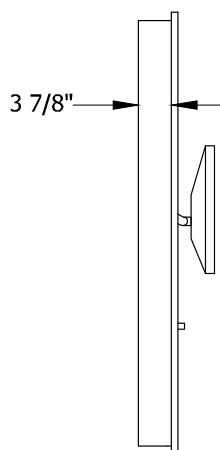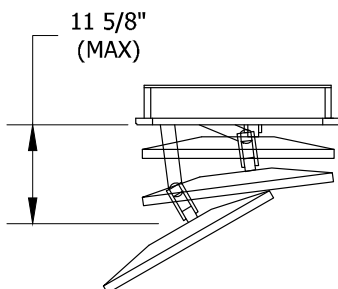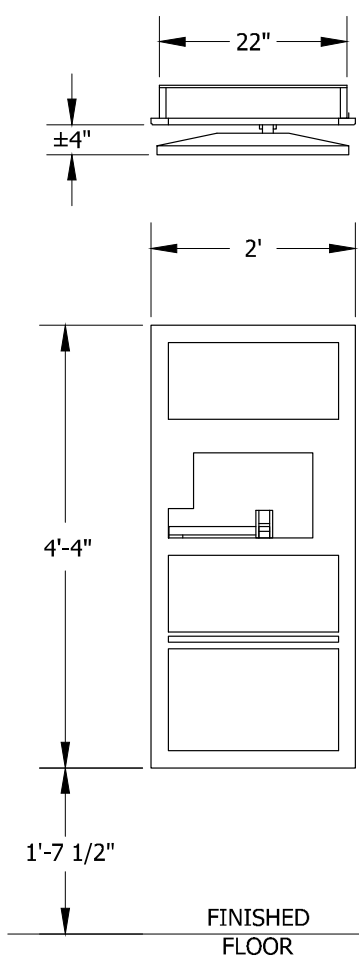

Electrical Specifications

120v Duplex Outlet
(all-in-one computer or
networked monitor)

Cat 5 (or better) Data Jack



Outlet box and
data jack are to
be mounted inside
cabinet **after**
installation.

Electrical and data pigtails
should be long enough to eas-
ily feed through side of cabinet
during installation (12"+).

Do not attach wiring to studs
closer than 12" from holes to
allow excess wire to be pushed
back in the stud bay.

Ideal Room Location

Left-Mounted Media Arm, best suited for right-handed clinician rooms. Ideal for smaller rooms, including dedicated hygiene, where space is at a premium.

To maximize monitor arm geometry, the centerline of the 24" Media should be placed roughly 5' from the headwall (as shown). Positioning the unit within the dimensional tolerance indicated will allow maximum effect for patient presentation and treatment planning.

